Configuring Ethernet Audio on Microsoft Windows Server 2012



Ethernet Audio uses the NFS file sharing system available in Server 2012 to allow file sharing with DigiCart/E or DigiCart/EX.



First, we need to make a change to the registry to allow "anonymous" users to be part of the Everyone group. Go to Start and select Windows Power Shell.



In the shell terminal, type **regedit** Enter. The Registry Editor will open.

۵.			Registry Editor	_
<u>File Edit View Favorites Help</u>				
	Name	Туре	Data	
Computer				.15

Open HKEY_LOCAL_MACHINE, and under this open SYSTEM, CurrentControlSet, and Control by clicking on the triangular arrow icons to the left of each item.





Scroll down, and within Control, click on Lsa (the item itself, not its arrow icon). Within Lsa, double click on the item "everyoneincludesanonymous":

đ					Re	gistry Editor	_ D X
Eile	<u>E</u> dit	⊻iew	F <u>a</u> vorites <u>H</u> elp				
			hivelist 🛛 🔨	Name	Туре	Data	
			IDConfigDI	ab (Default)	REG_SZ	(value not set)	
			IPMI	👪 auditbasedirect	REG_DWORD	0x00000000 (0)	
			Keyboard L	nuditbaseobjects	REG_DWORD	0x00000000 (0)	
			Keyboard L	ab Authentication	REG_MULTI_SZ	msv1_0	
			D Lsa	20 Bounds	REG_BINARY	00 30 00 00 00 20 00 00	
				👯 crashonauditfail	REG_DWORD	0x00000000 (0)	
			MediaCate	👸 disabledomainc	REG_DWORD	0x00000000 (0)	
			Medialnter -	💘 everyoneinclude	REG_DWORD	0x00000000 (0)	
			MediaProp	20 forceguest	REG_DWORD	0x00000000 (0)	
			MSDTC	👸 fullprivilegeaudi	REG_BINARY	00	
			b 📶 MUI	👸 LimitBlankPass	REG_DWORD	0x00000001 (1)	
			NetDiagFx	80 LsaPid	REG_DWORD	0x00000210 (528)	
			Netjoin	100 NoLmHash	REG_DWORD	0x00000001 (1)	
			NetTrace	Notification Pac	REG_MULTI_SZ	scecli rassfm	
			Network	20 ProductType	REG_DWORD	0x00000007 (7)	
			NetworkPr	in the strictanonymo	REG_DWORD	0x00000000 (0)	
			þ 🎍 Nis	restrictanonymo	REG_DWORD	0x00000001 (1)	
			Nodelnterf	SecureBoot	REG_DWORD	0x00000001 (1)	
			Notificatio	ecurity Packages	REG_MULTI_SZ	kerberos msv1_0 schannel wdigest tspkg pku2u	
<	III						
Comp	outer\H	IKEY_L	OCAL_MACHINE\SY	TEM\CurrentControlSet	(Control\Lsa		

The Edit DWORD dialog will open.

Change the Value data from 0 to 1.

Click OK. Close the Registry Editor. Restart the computer by pressing Control + Alt + Delete, click the Power icon, and then Restart.

Edit DWORE) (32-bit) Value
Value <u>n</u> ame: everyoneincludesanonymous	
<u>V</u> alue data:	Base <u>H</u> exadecimal <u>D</u> ecimal
	OK Cancel

Create the Folders That Will Be Shared.

Create one or more Folders that will be used as DigiCart/E "Net Drives". These can be on any letter mapped drive accessible by the Server 2012 host computer. They can also be within other folders. The name should be 14 characters or less to allow the NFS share name to be the same and still fit in the DigiCart/E display. If you do not know the names or how many you will use, create at least one now. In these instructions we are using the folder name DIGICART-E.

Within each folder, create ten Subfolders named 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 and S. Note that these correspond to the DigiCart's ten Directories within each DigiCart Drive. When mounted on the DigiCart, it will appear as an additional Drive selection on Drive number 3, 4, 5 or 6. (When discussing these structures here, Folder refers to the folders that will be

shared, Subfolder refers to the 0-9 and S folders created within it. Drive and Directory refer to the same things from the perspective of their use on the DigiCart as opposed to their use on Windows.)

Right click on the Folder and select Properties from the pop-up menu.

Manage					
					~ 0
Local Disk (C)			~ C	Search Local Disk (C:)	P
ogram Hes (vot) IOMOS MP ers indows SICART-E	View Sort by Group by Refresh	Date modified 17:42/2016 7:59 RM 9:65(2013 9:48) A17 PM 9:65(2013 9:48) A17 7:11/2013 2:47 PM 7:11/2013 2:47 PM 7:11/2013 2:47 PM 7:11/2013 3:48 PM	Type ride traister Frie folder Frie folder Frie folder Frie folder Frie folder	Size	
	Patte Patte thortcut Undo Rename	Cbi+Z			
	Share with				
	New				
	ogram Heis (ani) JOMOS MP en Indows Or(CART-E	optem tree, page CMADS & MP en ndows DICATEE View Sort by Corong by Refresh Patter bihotics View Patter bihotics View Sort by Patter bihotics View Sort by Patter bihotics View Patter bihotics View View Patter bihotics View Patter bihotics View View View View View View View View	open versions DANOS Brice control and DANOS Brice control and Brice control and and Brice control and and Brice control and and Brice and Brice brite Participations Danos Control Danos Antional J Aulo FM Participations Danos Control Danos Control	openn vere joan OMOS Belleville (2012) 2014 An Alexandrov Structure (2014) 2014 An Alexandrov Structur	prevention p



In the Security tab, click Edit.

DIGIC	CART-E Properti	ies 🛛 🗙
Previous Versions	Customize	NFS Sharing
General	Sharing	Security
Object name: C:\DIGIO	CART-E	
Group or user names:		
REATOR OWNER	{	
SYSTEM 8		
& Administrators (WIN-	BUVQHKE92ML\Ad	ministrators)
🚨 Users (WIN-BUVQH	KE92ML\Users)	
F	itali. Esta	
i o change permissions, c	NICK EDIT.	Edit
Permissions for CREATO DWNER	R AI	low Deny
Full control		^
Modify		
Read & execute		=
List folder contents		
Read		
Write		~
For special permissions or click Advanced.	advanced settings,	Ad <u>v</u> anced
Learn about access contr	rol and permissions	
ОК	Cancel App	bly Help

Click Add.

📔 🛛 Pern	nissions for	DIGICART-	E X
Security			
Object name: C:\l	DIGICART-E		
Group or user names	c		
CREATOR OW	'NER		
SYSTEM 8			
Administrators (WIN-BUVQHK	E92ML\Administr	rators)
🚜 Users (WIN-BU	VQHKE92ML\	Users)	
	[A <u>d</u> d	<u>R</u> emove
Permissions for CRE/ OWNER	ATOR	Allow	Deny
Full control			
Modify			
Read & execute			
List folder content	s		
Read			
Learn about access	control and per	missions	
	ОК	Cancel	Apply

Select Users or Groups	? X
Select this object type:	
Users, Groups, or Built-in security principals	Object Types
From this location:	
WIN-BUVQHKE92ML	Locations
Enter the object names to select (<u>examples</u>):	
Everyone	Check Names
Advanced OK	Cancel

Type the name Everyone in the object names field and click OK:

Permissions fo	r DIGICART-E	×
Security		
Object name: C:\DIGICART-E		
Group or user names:		
& CREATOR OWNER		
SYSTEM		-tem)
Everyone	VE JZIVIL VAQMINIStr	atorsj
& Users (WIN-BUVQHKE92ML)	\Users)	
	A <u>d</u> d	<u>R</u> emove
Permissions for Everyone	Allow	Deny
Full control		
Modify	~	
Read & execute	~	
List folder contents	~	
Read	~	
Learn about access control and pe	emissions	
OK	Cancel	Apply

Click on the Allow Full Control check box.

Click OK.



Select Everyone.Click Advanced.Click Change.Note that you must be the amember of an administrator or logged in as a member of a member of administrator or logged in administrat				DIGICART-	E Properties	×	
Select Everyone. Click Advanced. Click Change. Note that you must be the administrator group that has permission and must be the administrator or logged in as a memory of an administrator group that has permission. Select Everyone in the Object Name fail. Click OK. Click Change. Name that you must be the administrator group that has permission. Select Everyone in the Object Name fail. Click OK. Click ON: Click ON: Click ON: The Folder is now reader to the administrator group that has permission. Click ON:			[Previous Versions Cu	ustomize NFS	Sharing	
Select Everyone. Click Advanced. Click Change. Note that you must be the Administrator or logged in as a member of an administrator or logged in as a member of a member			ľ	General Sha	aring Se	ecurity	
Select Everyone. Click Advanced. Click Advanced. Click Change. Note that you must be the Administrator or logged in as a member of an administrator or logged in as a member of an administrator or logged in the second				Object name: C:\DIGICAR1-E			
Click Advanced. Click Advanced. Click Change. Note that you must be the Administrator or logged in as a member of an administrator group that has permission to make Ownership changes. Type Everyone in the Object Name field. Click OK. Click OK. Click OK. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to	Select Everyone			Group or user names:		^	
<image/> Click Advanced. Click Advanced. Click Change. Note that you must be the administrator group that has permission to make on the administrator group that has permission to make on the administrator group that has permission to make on the administrator group that has permission to make on the object Name affect on the base of the administrator of the administrator group that has permission to make on the object Name affect on the base of the administrator group that has permission to make on the object Name affect on the base of the administrator group that has permission to make on the object Name affect on the base of the object on the base of the base of the object on the base of the object on the base of the object on the base of the object on the base of the base of the base of the object on the base of the base of the object on the base of the base of the object on the object on the base of the object on the base of the object on the object of the object on the object on the object on the object on	Select Everyone.			SYSTEM			
<image/> Click Advanced. Click Advanced. Click Change. Note that you must be the Administrator or logged in as as member of an administrator or logged in as as member of an administrator group that has permission water of the Order Termen with a forder the Termen with a				Administratore (M/IN-RLIVOH	IKE92MI\Administration	•)	
<image/> Click Advanced.Click Advanced.Click Change.Note that you must be the Administrator or logged in an administrator group that has permission to make Ownership changes.Type Everyone in the Object Name failed. Click OK.Type Everyone in the Object Name failed. Click OK.Click Change.Click Change.Click Change.Click OK.Click Replace Owner on subcontainers and objects.Click OK. The Folder is now ready to shared via Ny. <td></td> <td></td> <td></td> <td>To change permissions, click Edit</td> <td></td> <td>dit</td> <td></td>				To change permissions, click Edit		dit	
<image/> Click Advanced.Click Advanced.Click Change.Note that you must be the Administrator or logged in as as member of an administrator group that has permission to make Ownership changes.Type Everyone in the Object Name field. Click OK.Type Everyone in the Object Name field. Click OK.Click Change.Click OK.Click OK. <t< td=""><td></td><td></td><td></td><td>Permissions for Everyone</td><td>Allow</td><td>Deny</td><td></td></t<>				Permissions for Everyone	Allow	Deny	
<image/> Click Advanced.Click Advanced.Click Change.Note that you must be the Administrator or logged names ameeber of an administrator group that has permission to make Ownership changes.Type Everyone in the Object Name field.Click OK.Click OK. The Folder is now ready to be shared via NFS.				Full control Modify	~	^	
<image/> Click Advanced. Click Advanced. Improvement of the control of				Read & execute	1	=	
Click Advanced. Image: Click Change. Note that you must be the Administrator or logged in as a member of an administrator or logged in the logge member of a method with the determent of the determent with the				Read	~		
<image/>	Click Advanced.			Write For special permissions or advance	ed settings,	✓	
<image/>				click Advanced.	Ady	anced	
<text></text>				Learn about access control and p	<u>ermissions</u>		
<text></text>				OK Cancel	Apply	Help	
Click Change. I define the construction of th							
Click Change. Note that you must be the Administrator or logged in as a member of an administrator or logged in administrator or logged in as a member of an administrator or logged in ad		<u> </u>		Advanced Security Settings f	or DIGICART-E	Ŀ	- - X
<image/>	Click Change.	Name: C:\DI	IGICART-E				
Note that you must be the Administrator or logged in as a group that has permission beaches Select User or Cocop Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Select User or Cocop Select User or		Owner: Adm	inistrators (WIN-BU	VQHKE92ML\Administrators) 🔞 🤇	hange		
Production definition definition definition Production Produc		Permissions A	uditing Effect	ive Access			
Note that you must be the Administrator or logged in as a member of an administrator group that has permission to make Ownership changes.Iter the the sense the constraint of the the sense the constraint of the the sense 		For additional information Permission entries:	ation, double-click a	a permission entry. To modify a perr	nission entry, select the	entry and click Edit (if a	vailable).
Note that you must be the Administrator or logged in as a member of an administrator group that has permission to make Ownership changes. Image: Compare the State S		Type Princip	al	Access Ir	herited from	Applies to	
Administrator or logged in as a member of an administrator group that has permission to make Ownership changes.	Note that you must be the	Allow Everyor	ne A	Full control N Full control C	lone :\	This folder, subfolders This folder, subfolders	and files and files
member of an administrator group that has permission to make Ownership changes. Image: Description: Control (Control (Administrator or logged in as a	Allow Admini	win-BUVQHKE92M	2H Full control C L\U Read & execute C	2N 2N	This folder, subfolders This folder, subfolders	and files and files
<pre>group that has permission to make Ownership changes. if the inverse inve</pre>	member of an administrator	Allow Users (V & Allow CREAT)	WIN-BUVQHKE92M OR OWNER	L\U Special C Full control C	3A 3A	This folder and subfol Subfolders and files or	ders nly
make Ownership changes. Image: Im	group that has permission to						
<image/>	make Ownership changes.	A <u>d</u> d <u>R</u> en	nove <u>V</u> iew				
Picket al hild eiger permission ethics held permission ethics form [] Image: control in the control in		Disable inheritance					
<text><text><text><text></text></text></text></text>			oject permission ent	ries with inheritable permission entr	les from this object		Arabi
Select User or Group 2 For this location: For this location: WINBUVAHKES2ML Docations For the object name to select (scamples): Everyone Everyone OK Click OK. OK Check Replace Owner on subcontainers and objects. Select Security Settings for DBCATT I For effective Across For effective Across							
 Select this object type: Use: Group, or Bulk-in security principal Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS. 		[Select U	ser or Group		? X
 Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS. 			Select this ob	oject type:			
 Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS. 			User, Group	or Built-in security principal		Object	Types
Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS.			From this loca	ation:			
Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS.			WIN-BUVQI	HKE92ML		Locat	tions
 Type Everyone in the Object Name field. Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS. 			Enter the obj	ect name to select (<u>examples</u>)	:		
Click OK. Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS.	Type Everyone in the Object Name	e field.	Lveryone				Names
Check Replace Owner on subcontainers and objects.	Click						
Check Replace Owner on subcontainers and objects.	CHCK OK.		Advanced	d		ОКС	ancel
Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS.		L					
Check Replace Owner on subcontainers and objects.		3.		Advanced Security Set	tings for DIGICART-E	l	- 0 X
Check Replace Owner on subcontainers and objects. Click OK. The Folder is now ready to be shared via NFS.		Name	C:\DIGICAR	T-E			
Click OK. The Folder is now ready to be shared via NFS.	Check Replace Owner on	Owner	Replace	owner on subcontainers and objects			
Subcontrainer's and objects. For additional information, double-click a permission entry. To modify a permission entry, select the entry and click [at (if available). Primision entries: View Allow User (WN-BUVCHESDMU). Real & execute Click OK. The Folder is now ready to be shared via NFS. OK	subcontainers and objects	Permi	issions Auditing	g Effective Access			
Click OK. The Folder is now ready to be shared via NFS.		For ad	ditional information, d	louble-click a permission entry. To modi	fy a permission entry, selec	t the entry and click Edit (if	available).
Click OK. The Folder is now ready to be shared via NFS.		Ti State Autor	ype Principal llow Everyone	Access Full control	Inherited from None	Applies to This folder, subfolde	ers and files
Click OK. The Folder is now ready to be shared via NFS.		88. A	llow SYSTEM llow Administrator	Full control s (WIN-BUVQH Full control	C\ C\	This folder, subfolde This folder, subfolde	ers and files ers and files
Click OK. The Folder is now ready to be shared via NFS.		88. A 88. A	llow Users (WIN-BU llow Users (WIN-BU	JVQHKE92ML\U Read & execute JVQHKE92ML\U Special	C/	This folder, subfolde This folder and subf	ers and files olders
Click OK. The Folder Is now ready to be shared via NFS.		88. A	Ilow CREATOR OW	NER Full control	C/	Subfolders and files	only
be shared via NFS. Reglace all child object permission entries with inheritable permission entries from this object OK Cancel Apply	Click OK. The Folder is now ready	/ to	dd <u>Bemove</u>	View			
OK Cancel Apply	be shared via NFS.	Reg	lace all child object pe	rmission entries with inheritable permiss	ion entries from this object	t	
					[OK Cancel	Apply



Using the Server Manager to Configure the NFS Service.













Sharing the Folder with NFS

Now that the NFS service has been configured, you can create shares in two ways. One is by using the Server Manager, the other is by accessing the Properties of the folders to be shared.

To Create an NFS share using Server Manager:







Select Type a custom path. Click Browse.

Click on the folder you wish to share.



Select Folder

Click Select Folder.



Click Next.



- 🗆 X

You can set the share name to be different than the folder name, but this is not recommended. Share names should be no more than 14 characters long to fit in the DigiCart/E display.

	New Share Wizard	
pecify share na	ame	
Select Profile	Share name: DIGICART-E	
Share Location		
Share Name	Local path to share:	
Authentication	CADIGICART-E	
Chara Decelori	Remote path to share:	
	WIN-BUVQHKE92ML/DIGICART-E	
	< Previous Next >	Create Cancel

Click Next.

Click Next.

Select "No server authentication (AUTH_SYS)", then "Enable umapped user access" and "Allow anonymous access".



You enabled anonymous access for NFS shares, which requires applying Let Everyone permissions to anonymous users. Making this change to the security profile of your system should only be done if anonymous access is absolutely necessary.

Do you want to apply Let Everyone permissions to anonymous users?

Click Yes. (This measure was taken in the first section on editing the Registry.)



RROADCAST



Click Next.

Click on Add.

Click on Select A Principal.

Type Everyone in the Object Name field.

Click Check Names. Everyone should be underlined.

Click OK.



Select Full Control.

	Permission Entry for DIGICART-E	l		×
Principal: Type: Applies to:	Everyone Select a principal Allow			
Basic permi	tsion: She She Solution: She Solut	tw advanced	Clear a	d
		OK	Car	cel

Click OK.

Click OK again, then click Next.



Finally, click Create.

View results				
	The share was success	fully created		
	The share was success	fully created.		
	Task	Progress	Status	
	Create NFS share		Completed	
Authentication	Set NFS permissions		Completed	
Confirmation				
Results				

The DigiCart/E can now mount the share using its Mount Net Drive utility.

You can also share the DigiCart folders using standard Windows file sharing to enable other users on the network to access the files.



Using Folder Properties to Set Up NFS Shares

In Windows File Explorer, right click on the Folder you wish to share and select Properties from the pop-up menu.

	L DIGICART-E Properties					
Click the NFS Sharing tab.	Previous Ve General	ersions	Customize Sharing	NFS Sharing Security		
		DIGICART-E				
	Туре:	File folder				
	Location:	C:\				
	Size:	0 bytes				
	Size on disk:	0 bytes				
	Contains:	0 Files <u>, 0</u>	Folders			
			L	DIGICART-E Prope	rties	x
	Created:	Monda	General	Sharing	Security	
	Attributes:	■ Rea	Previous Versio	ons Customize	NFS Sharing	
		🗌 <u>H</u> id	Services for NFS	S Sharing		
			DIGIC Not St	ART-E hared		
			Network Path:			
			Not Shared			
	OK		- NES Share Man	agement		21
-			Enable or disabl	le NFS sharing of this folde	r, set permissions,	
Click Manage NFS Sharing.			share name, and	d other advanced sharing	options.	
			<u> M</u> anage N	FS Sharing		
			ОК	Cancel	pply Help	

Check Share this folder.

NFS Advanced Sharing					
Share this folder					
Settings					
Share name; DIGICART-E					
Netwo <u>rk</u> name: WIN-BUVQHKE92ML					
Encoding:					
Kerberos v5 privacy and authentication [Krb5p]					
✓ Kerberos v5 integrity and authentication [Krb5i]					
Kerberos v5 authentication [Krb5]					
☑ No server authentication [Auth_SYS]					
Enable un <u>m</u> apped user access					



		NFS Advanced Sharing
The share name can be edited here, but it is recommended that it be left the same as the Folder. The share name should be 14 characters or less to fit in the DigiCart/E Drive Name display.		✓ Share this folder Settings Share name: DIGICART-E Network name: WIN-BUVQHKE92ML Encoding: ANSI ✓ Kerberos v5 privacy and authentication [Krb5p] ✓ Kerberos v5 integrity and authentication [Krb5i] ✓ Kerberos v5 authentication [Krb5i] ✓ No server authentication [Auth_SYS]
Select Allow anonymous access.		Enable unmapped user access Allow unmapped user Unix access (by UID/GID) Allow anonymous access Anonymous UID: -2 Anonymous GID: -2
Click on Permissions.		To set permissions for how users access this folder over the network, dick Permissions
In Type of access select Read-Write.	NFS Share Path: C:\DIGICART-E Name: ALL MACHINES Read-Only Lype of access: Read-Only Encoding: Read-Write	Permissions ANSI Root Access Disallowed ANSI Root Access Disallowed Add Remove Add All MACHINES Read-Write Add Remove Jype of access: Read-Write Allow root access
Click OK.		gnoouing. ANSI

Finally, click OK in the NFS Advanced Sharing dialog, and Close in the Properties dialog.

The DigiCart/E can now mount the share using its Mount Net Drive utility.

You can also share the DigiCart folders using standard Windows file sharing to enable other users on the network to access the files. This is found under the Sharing tab in the Properties dialog.

